

You have decided to buy a watch, which was assembled by a watchmaker using a Ronda movement. Please note that no watches are produced or distributed under the Ronda Brand.

In case of repairs, guarantee claims and questions concerning the functioning of a watch, purchasers and consumers should contact their retailer or the watch manufacturer, for which the relevant information can be found in the sales or guarantee documentation provided with the watch.

### Description of the display and control buttons

#### Display elements

- Second hand
- Minute hand
- Hour hand
- Second counter
- Minute counter
- Hour counter (only 5030.D)
- Date 5021.B
- Date 5030.D

#### Control buttons

- Push button A
- Crown
- Push button B

01

05

### Chronograph: Basic function

(Start / Stop / Reset)

Example:

- Start:** Press push-button A.
- Stop:** To stop the timing, press push-button A once more and read the chronograph hands: **1h / 20min / 38 sec.**
- Zero positioning:** Press push-button B. (The chronograph hands will be reset to their zero positions.)

06

### Chronograph: Accumulated timing

Example:

- Start:** (start timing)
- Stop:** (e.g. 15 min 5 sec following 1)
- Restart:** (timing is resumed)
- Stop:** (e.g. 5 min 12 sec following 3) = **20 min 17 sec** (The accumulated measured time is shown)
- Reset:** The chronograph hands are returned to their zero positions.

Please note:

\* Following 4, the accumulation of the timing can be continued by pressing **push-button A** (Restart / Stop, Restart / Stop, ...).

07

### Chronograph: Intermediate or interval timing

Example:


- Start:** (start timing)
- Display interval:** e.g. 20 minutes 17 seconds (timing continues in the background)
- Making up the measured time:** (The chronograph hands are quickly advanced to the ongoing measured time.)
- Stop:** (Final time is displayed)
- Reset:** The chronograph hands are returned to their zero position.

Please note:


\* Following 2, further intervals or intermediates can be displayed by pressing **push-button B** (display interval / make up measured time, ...).

02

### Setting the time

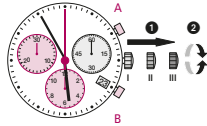

- Pull out the crown to position III (the watch stops).
- Turn the crown until you reach the correct time 8:45.
- Push the crown back into position I.

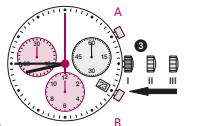


Please note:


\* In order to set the time to the exact second, 1 must be pulled out when the second hand is in position «60». Once the hour and minute hands have been set, 2 must be pushed back into position I at the exact second.

03

### Setting the date (quick mode)

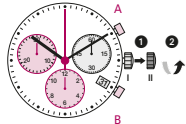

- Pull out the crown to position II (the watch continues to run).
- Turn the crown until the correct date [1] appears.
- Push the crown back into position I.

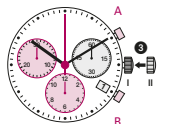

Please note:


During the date changing phase between approx. 9 PM and 12 PM, the date must be set to the date of the following day.

04


### Setting the date/time following a battery change

Example:



- Date / time on the watch: [12] / 1:25 AM  
- Present date / time: [4] / 8:30 PM

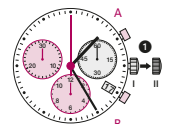

- Pull out the crown to position II (the watch continues to run).
- Turn the crown until yesterday's date appears [3].

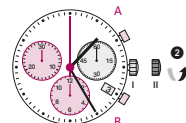

- Pull out the crown to position III (the watch stops).
- Turn the crown until the correct date [4] appears.
- Continue to turn the crown until the correct time 8:30 PM appears.
- Push the crown back into position I.

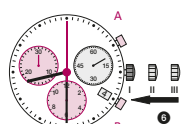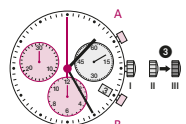

Please note:

\* To set your watch to the exact second, please refer to the chapter entitled «setting the time».  
\*\*Please observe the AM/PM clock rhythm.

05

06

### Adjusting the chronograph hands to zero position

Example:

- Pull out the crown to position III (all chronograph hands are in their correct or incorrect zero position).
- Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the second counter hand rotates by 360° → corrective mode is activated).

07

08

### Adjusting the second counter hand

Single step ↖ A 1 x short  
Continuous ↖ A long

Adjusting the next hand B ↖

### Adjusting the hour counter hand at 5030.D (position 6h)

Single step ↖ A 1 x short  
Continuous ↖ A long

Adjusting the next hand B ↖

### Adjusting the minute counter hand (position 9h)

Single step ↖ A 1 x short  
Continuous ↖ A long

Returning the crown to position I

Termination of the chronograph hands adjustment (can be carried out at any time).